

# LAIRD WB45NBT EVENTS

Application Note

v2.0

## INTRODUCTION

The goal of this document includes the following:

- List all events that are supported by the WB45NBT.
- List all applicable SDC\_E\_DISCONNECT reasons.
- List all applicable SDC\_E\_CMDERROR reasons.

## EVENTS

The following table (Table 1) displays events that are supported by the WB45NBT.

**Note:** Events not included in the following list are not supported by the WB45NBT.

*Table 1: WB45NBT Events*

Event	Description
SDC_E_DHCP	A change to the DHCP leases file has been made.
SDC_E_READY	Indicates the wireless device is ready. Sent once after a power on or reset.
SDC_E_CONNECT_REQ	Indicates a request to connect to a network.
SDC_E_CONNECT	Indicates a connection to a network has occurred. It is considered a roam event if another connection event occurs without a disconnect event first occurring.
SDC_E_RECONNECT_REQ	Indicates a request to reconnect to a network to which the device was previously connected.
SDC_E_DISCONNECT_REQ	Indicates a request to disconnect from a network.
SDC_E_DISCONNECT	Indicates the device has lost connectivity to a network. See SDC_ATH_DISCONNECT_REASON for more information.
SDC_E_SCAN_REQ	Indicates a request to initiate a scan.
SDC_E_SCAN	Indicates an attempted scan is complete. Check status field for scan success or failure.
SDC_E_REGDOMAIN	Indicates the firmware's regulatory domain has changed.
SDC_E_CMDERROR	Indicates a firmware error. This is a fatal error and the should be reset.
SDC_E_ROAM	Indicates a roam has occurred. The MAC address field is the AP to which the device roamed. This should be seen along with SDC_E_CONNECT.
SDC_E_ASSOC	Indicates that the device has associated. This should be seen along with SDC_E_CONNECT.
SDC_E_DISASSOC	Indicates that the device has disassociated. This should be seen along with SDC_E_DISCONNECT.
SDC_E_AUTH	Indicates that the device has authenticated.

## SDC\_E\_DISCONNECT REASONS

The following table (Table 2) describes applicable SDC\_E\_DISCONNECT Reasons (SDC\_ATH\_DISCONNECT\_REASON).

*Table 2: SDC\_E\_DISCONNECT Reasons*

Reason	Description
NO_NETWORK_AVAIL	Unable to find the desired network.
LOST_LINK	Unable to maintain a link with desired network.
DISCONNECT_CMD	A Disconnect request was processed.
BSS_DISCONNECTED	The network explicitly disconnected the device.
AUTH_FAILED	802.11 authentication failed.
ASSOC_FAILED	802.11 association failed.
NO_RESOURCES_AVAIL	The AP has insufficient resources to complete the connection.
CSERV_DISCONNECT	The firmware has decided to disconnect from network. This can occur from host-influenced settings such as marking an AP as 'bad'.
INVALID_PROFILE	An attempt was made to reconnect to a network that no longer matches the current profile.
DOT11H_CHANNEL_SWITCH	The AP sent a 802.11h Channel Switch Announcement.
PROFILE_MISMATCH	The AP has changed its profile.
CONNECTION_EVICTED	The module was evicted from the network.
IBSS_MERGE	The station has merged with another IBSS.

## SDC\_E\_CMDERROR REASONS

The following table (Table 3) describes applicable SDC\_E\_CMDERROR Reasons (SDC\_ATH\_CMDERROR\_REASON).

*Table 3: SDC\_E\_CMDERROR Reasons*

Reason	Description
INVALID_PARAM	An invalid parameter was sent to the firmware.
ILLEGAL_STATE	The firmware is in an illegal state.
INTERNAL_ERROR	An internal error has occurred in the firmware.

## REVISION HISTORY

Revision	Date	Description	Initiated By
1.0	22 July 2014	Initial Release	John Imboden
2.0	24 Oct 2014	Standardized formatting, added introduction	Sue White