

# **BLE Regulation Test in Linux**

Application Note v2.0

#### 1 Introduction

For legacy Bluetooth, you can set a Bluetooth module in test mode and control it using Bluetooth test equipment such as an Anritsu 8852B or R&S CBT Bluetooth tester. However, for BLE, there is no such test mode. You can only set TX power manually by HCl command for a specific channel, data length, and packet type.

## 2 Linux Setup

To set up your Linux system for the BLE regulation test, follow these steps:

- 1. Load the firmware to chipset.
  - For the Sterling-LWB or Sterling-LWB5, you must patch the firmware into the chipset prior to bring up the HCl interface.
     Use the following command to load the firmware:

```
$brcm_patchram_plus --patchram{path to .hcd file} --enable_hci --no2bytes --
tosleep 1000 {path to /dev/ UART interface} &
```

- For 60 series modules, the firmware is the same one of Wi-Fi firmware; once you load the Wi-Fi driver, the firmware is loaded already.
- 2. Open the HCI interface.
- 3. Use the hciconfig command to enable the HCl interface and to ensure that hci0 is in the list.

#### 3 HCI Command for a BLE Transmitter Test

To use the HCl command for a BLE transmitter test, follow these steps:

1. Use the hcitool command to reset the module. This HCl command is integrated in the BlueZ package.

```
$hcitool cmd 0x03 0x03

This results in the following HCl event:
```

```
HCI Command: ogf 0x03, ocf 0x0003, plen 0
HCI Event: 0x0e plen 4
01 03 0C 00
```

2. Use the applicable HCl command to set the BLE transmitter test.

You must set the following parameters in this command: frequency index, data length, and packet payload type.

1

- Frequency index k= 0~39
   Frequency 2402+2k (MHz)
- Data length
- Packet payload type Payload length in the range of 0 to 37

0x0: PRBS9 0x1: 11110000



0x2: 10101010 0x3: PRBS15 0x4: 11111111 0x5: 00000000 0x6: 00001111 0x7: 01010101

HCI command format:

\$hcitool cmd 0x08 0x1e Frequency\_index Data\_length Payload\_type

Such as:

\$hcitool cmd 0x08 0x1e 0x1 0x10 0x0

If you send the correct HCl command, the following HCl event displays:

HCI Command: ogf 0x08, ocf 0x001e, plen 3

01 10 00

HCI Event: 0x0e plen 4

01 1E 20 00

In the spectrum analyzer, you should have the following BLE signal (Figure 1).

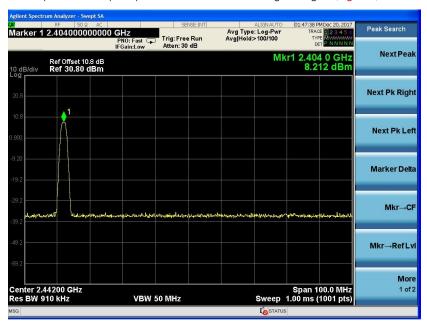


Figure 1: Spectrum analyzer - BLE signal

3. Set the BLE test end command to stop BLE transmitter test.

\$hcitool cmd 0x08 0x1f

If you send the correct HCl command, the following HCl event displays:

HCI Command: ogf 0x08, ocf 0x001f, plen 0

HCI Event: 0x0e plen 6

01 1F 20 00 00 00



### 4 HCI Command for BLE Receiver Test

To use the HCl command for a BLE receiver test, follow these steps:

1. Use the hcitool command to reset the module. This HCl command is integrated in the BlueZ package.

\$hcitool cmd 0x03 0x03

This results in the following HCI event:

HCI Command: ogf 0x03, ocf 0x0003, plen 0

HCI Event: 0x0e plen 4

01 03 0C 00

2. Use the applicable HCl command to set the BLE receiver test.

You must only set the frequency index parameter in this command.

• Frequency index: k= 0~39 Frequency 2402+2k (MHz)

HCI command format:

\$hcitool cmd 0x08 0x1e Frequency\_index

Such as:

\$hcitool cmd 0x08 0x1e 0x1

If you send the correct HCl command, the following HCl event displays:

HCI Command: ogf 0x03, ocf 0x0003, plen 0 HCI Event: 0x0e plen 4

01 03 0C 00

3. Set the BLE test end command to stop BLE receiver test.

\$hcitool cmd 0x08 0x1f

If you send the correct HCl command, the following HCl event displays:

HCI Command: ogf 0x08, ocf 0x001f, plen 0

HCI Event: 0x0e plen 6

01 1F 20 00 00 00

## 5 Revision History

Version	Date	Notes	Contributor(s)	Approver
1.0	31 Jan 2018	Initial version	Miles Chung	Jonathan Kaye
2.0	20 Mar 2025	Ezurio rebranding	Sue White	Dave Drogowski

Ezurio's products are subject to standard <u>Terms & Conditions</u>.