

Laird Wireless Development Kit – BT740

Application Note

v1.2

Part # DVK-BT740-SA and DVK-BT740-SC

Applicable to the following Bluetooth module part numbers: BT740-SA and BT740-SC

1 OVERVIEW

Laird's Wireless Development Kit provides a platform for rapid prototyping of wireless connectivity, providing options for the development of Bluetooth applications.

This manual is for Rev. 03 of the development PCB, previously utilised in Laird part # BISDK02BI-02.

Introduction


The Laird Wireless Development Kit is designed to support the rapid development of applications and software for the latest range of Laird Class 1 Bluetooth modules. It is applicable to all of the BT740 series of modules, which includes module part numbers BT740-SA and BT740-SC. More information regarding these products is available from the Laird website: <http://www.lairdtech.com/Products/BT740-Series>

Package Contents

All kits contain the following items:



Development Board	The motherboard is used to mount your chosen wireless module, providing the RS-232 interface and access to all the module interface pins.
USB cable	The USB cable can ONLY be used to provide power for the Dev Kit via the on-board connector.
Serial cable	RS-232 interface cable to provide communication between your host pc and your choice of wireless module. The serial cable can also be used to power the motherboard and module from pin 9.
Bluetooth USB adapter	Development Kit includes a free USB Bluetooth adaptor, Laird part # BRBLU03-010A0. This robust, Class 1 Bluetoothv2.0 Adapter has native support for Microsoft Bluetooth software stacks since Windows XP SP2.

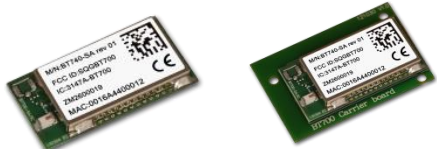CB-BT740-SA OR CB-BT740-SC	<p>Depending upon the end DVK part number one of these carrier boards will be included. This is simply the small SMT Bluetooth module mounted onto a host PCB carrier board that terminates in a Hirose 40 pin connector on its base to allow simple, removable connectivity to the mating Development Motherboard. This may not be bought alone and is for evaluation purposes ONLY.</p> <p>Note: The Carrier Board inverts the Reset logic generated on the Development board (to Active high for Reset).</p> 
EZURiO / Laird Terminal application	PC-based terminal emulation software, specifically designed to help the development and diagnostics of applications on the Laird range of modules.
Web link Card for Documentation	Instructions on the web links to download extensive documentation including Development Kit user guide, board design circuit diagrams, User Manuals and quick start guides and product videos.
External Antenna	External antenna only supplied with DVK-BT740-SC development kit.

2 WIRELESS MODULE DEVELOPMENT BOARD

The development board allows the Laird Bluetooth Module to be connected to a PC. The development board provides RS-232 level conversion through a standard 9-way D type connector to all pins of the 40-way Hirose connector supplied on the Carrier Board that the BT730 series module is soldered onto.

3 GETTING TO KNOW THE DEVELOPMENT BOARD

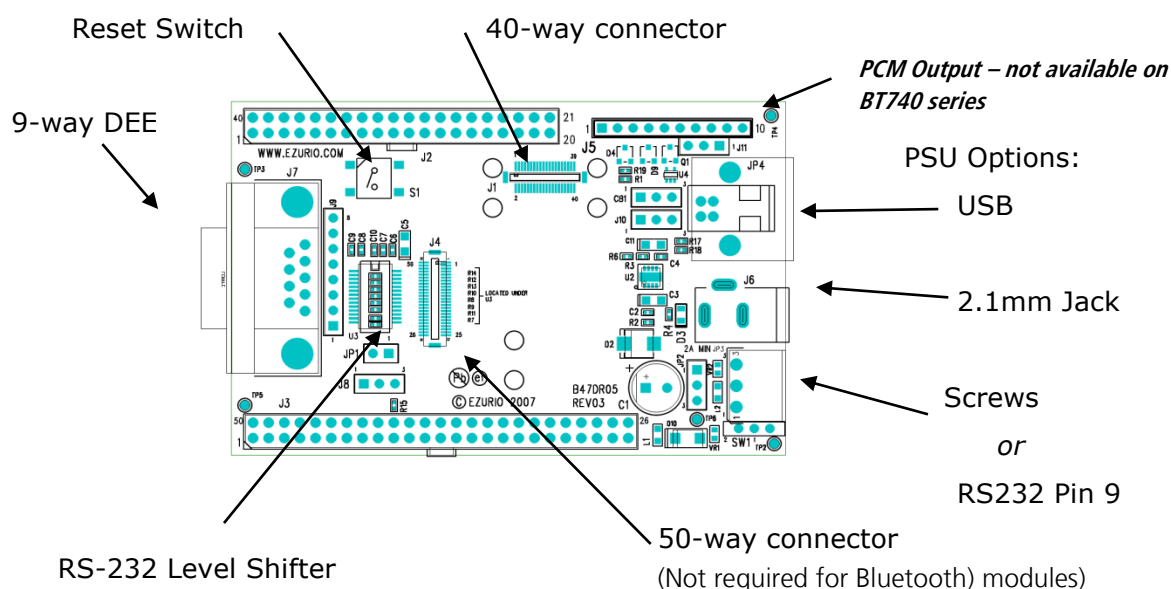


Figure 1: Development Board

4 POWER SUPPLY

	Minimum	Typical	Maximum
Input Voltage	3.6V	5V	6V

The development board provides a number of options to provide power to the module:

- 5V Power from a USB port
- Power from an external power supply via screw terminals
- Power from an external mains power block via a 2.1 mm DC connector
- Power via Pin 9 of the RS232 adaptor

The developer kit includes a USB cable to provide power to the development board. This should be plugged into a PC USB port, a USB hub, or a mains adaptor with a USB output. If a hub is used, it should be a powered USB hub to ensure that sufficient current is available at the port being used. The BT740 series modules can be driven by the current available at a USB port.

Jumper JP2 is used to select an external power source on the screw terminals.

Note: MC55 Supply is not for use with the BT740 – this relates to a legacy use of the Development Motherboard only.

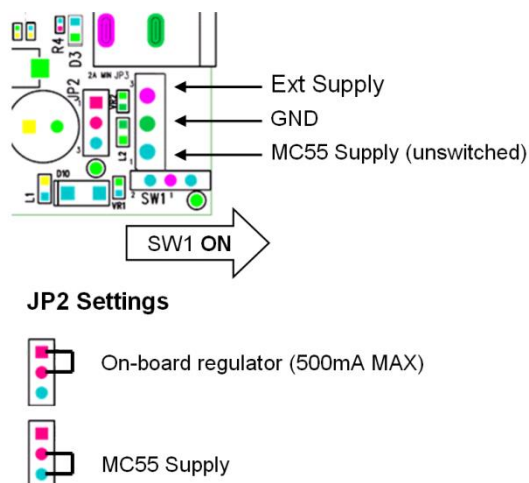


Figure 2: JP2 Settings

SW1 (slide switch) provides the power on/off for the module but does not isolate the power from other components of the development board.

S1 (push button TACT switch) provides a reset signal to both the 40- and 50-way connectors. Note that the reset polarity is different for the 40- and 50-way pinouts. This is accomplished by circuitry on the development board, providing an active HIGH reset for the 40-way connector and an active LOW for the 50-way connector. Users connecting a reset signal to the test points on the board should be aware that there is a 10k Ω pulldown on the 40-way reset pin and an open collector transistor connected to the 50-way reset pin. Refer to the schematics available for download from the **Documentation** tab at <http://www.lairdtech.com/Products/BT740-Series>

Note: The 50-way connector is not used for Bluetooth modules.

An alternative method of powering the development kit is to supply power to Pin 9 of the RS-232 connector. If this method is used, no other power supplies should be connected to the board. Pins 2 and 3 of Jumper 8 on the development board need to be connected to allow power to be derived from pin 9 of the serial port. In this mode the ring indicator is not available from the RS-232 interface. Note that J8 is fitted with a wire link in the default position. This must be removed and replaced with a jumper or wire link to enable Pin 9 power.

J8 Settings

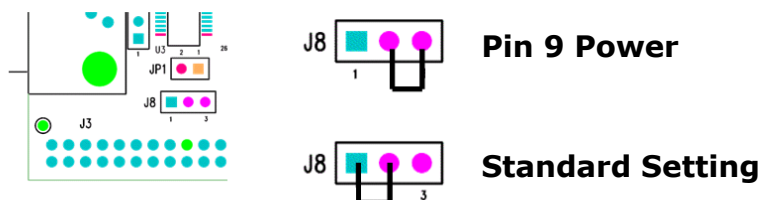


Figure 3: J8 Settings

5 RS-232 SERIAL INTERFACE

This provides a direct interface to any standard RS-232 port on a PC or peripheral. The 9-way D type connector can be plugged straight into a serial port on a PC or peripheral. If access to the serial port is restricted, the serial cable provided can be used to connect the development board to the PC.

The development board contains a level shifter on the RX, TX, CTS, RTS, DTR, DSR, RI, and DCD signals that converts between the 3.3 V levels required on the module to the standard RS-232 levels.

The level shifter can have its outputs permanently enabled or enabled only when the module is active (i.e., not in sleep mode). The latter is useful when a defined state is required at the RS-232 interface as the module enters and exits its low power modes. The behaviour is determined by the setting of J10 which is located behind the USB socket at the rear of the board. The normal setting is *Always Enabled*.

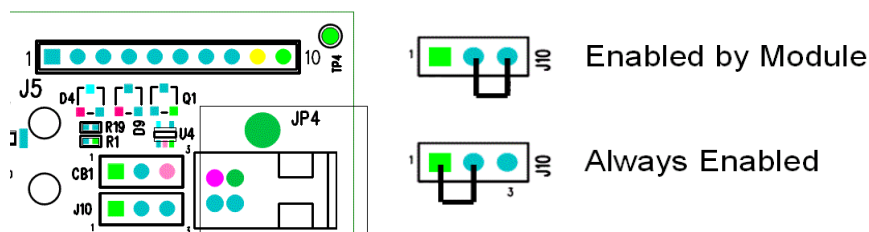


Figure 4: J10 Settings

If digital signal levels are required at the RS-232 connector, these can be achieved by removing the level shifter and populating the PCB pads that are then exposed with zero ohm links.

6 SOFTWARE

The development board connects the Carrier Board housing the BT740 series module to the serial port of a PC or other device. From a PC you can communicate with the module using any Terminal Emulator software such as HyperTerminal, Procomm, or the EZURiO / Laird Terminal application supplied.

EZURiO Terminal is a terminal emulation application capable of running on Windows 98, Me, 2000, XP, Windows 7 and Windows 8 operating systems. It was developed specifically to aid development and testing of Laird modules. It allows connection to serial devices using any combination of the communications parameters listed in [Table 1](#).

Table 1: Communication Parameters

COM Port:	1 to 255
Baud rate:	300 to 921600
Parity:	None, Odd, Even
Data Bits:	7 or 8
Stop Bits:	1 or 2
Handshaking:	None or CTS/RTS

The benefits of using EZURiO / Laird Terminal are:

- Status of DSR, CTS, DCD, and RI are continuously displayed
- DTR on the host PC can be directly controlled via a check box
- RTS can be directly controlled
- BREAK signals can be sent
- Scripts can be run to assist
- Additional built-in features speed development

Laird includes a “Data Transfer Test” mode allowing data to be sent as fast as the handshaking permits. This feature is useful for testing the bit transfer rate of a Bluetooth connection.

The EZURiO / Laird Terminal application is available from our website on the documentation tab of the BT740 Product Page: <http://www.lairdtech.com/Products/BT740-Series>

7 INTERFACE SPECIFICATION

7.1 Serial port connector

The pin-out for the 9-way D type connector is shown in [Table 2](#).

Note: The direction is as seen from the module’s perspective.

Table 2: Pin Definitions

Pin	Description	Signal	Direction
1	Data Carrier Detect	DCD	Output
2	Transmit Data	TD	Output
3	Receive Data	RD	Input
4	Data Set Ready	DSR	Input
5	Ground	GND	---
6	Data Terminal Ready	DTR	Output
7	Clear To Send	CTS	Input
8	Request To Send	RTS	Output
9	Board Power or Ring Indicator	RI or Power	Output

7.2 Module Breakout Connectors

All of the pins from the 40-way connector are available on the two rows of plated through holes on the long sides of the board. These translate directly to the pin layout of the module receptacles, allowing access to all of the module pins. Pin 1 is indicated by an indent on the silk screen.

The format of the holes allows the fitting of your choice of connectors, or they can be used for directly soldering test wires to the board. Both are laid out on a standard 2.54 mm (0.1 inch) pitch.

7.3 Board Configuration Jumpers

Table 3: Jumpers

Jumper	Description
JP1	Breaks the supply to the module for current measurements
JP2	Selects external power supply for Siemens modules
JP8	Selects pin 9 power (<i>fitted as wire link</i>)
J10	Selects low power mode for RS-232 level shifter

8 OTHER FEATURES

8.1 Power Consumption Measurement

A removable jumper JP1 is provided to break the supply line directly to the modules, allowing the current consumption to be measured. For normal operation JP1 must be fitted.

Note: This only measures the current consumption of the module, and not of the level shifter or other peripheral circuitry.

8.2 USB Access

USB access can be provided to allow a direct USB connection to a Bluetooth HCI module. To do this fit resistor pads R17 and R18 on the development kit with zero Ohm links.

Note that if this is done and the unit is then connected to a USB host port, it will be powered from that same port. Do not attempt to use any other power source for the development kit when operating in this mode.

This is not relevant for modules with a UART interface.

REVISION HISTORY

Revision	Date	Description	Approved By
1.0	27 June 13	Initial Release	Jonathan Kaye
1.1	19 Aug 13	Updates and formatting	Jonathan Kaye
1.2	7 April 2015	Fixed footer and formatting.	Dave Drogowski