

Quick Start Guide (QSG) – Serial Port Profile

Laird part # DVK-BT730-SA or DVK-BT730-SC

V1.1

INTRODUCTION

This Quick Start Guide demonstrates using the Serial Port Profile (SPP) role on the DVK-BT730 in four different scenarios.

REQUIREMENTS

- DVK-BT730 including BT730 Carrier Board
- BRBLU03-010A0 USB Bluetooth adapter or Computer with built-in Bluetooth
- BT730 development motherboard
- Windows XP Operating System or later
- Terminal Software such as Laird / EZURiO terminal - www.lairdtech.com/zips/LairdTerminal_v6_9_0.zip (found in software tab of [BT730 product page](#))
- Laird's [MpBtHost utility](#) if using MultiPoint functionality (found in software tab of [BT730 product page](#))
- RS232 cable or USB-RS232 adaptor



The development kit motherboard's USB socket provides **ONLY** power to the module. A RS232 connection is required to have serial communications with the module on the carrier board. Laird provides a terminal emulator program called Laird / EZURiO Terminal for AT mode operation but you can use your preferred terminal emulator program in its place. Another program Laird provides is MpBtHost for multipoint (MP) mode operation. This example uses the Microsoft Bluetooth stack and software that comes with Windows 7. If your computer has built-in Bluetooth support, you can modify the computer aspect of the procedure documented below to match your existing Bluetooth instead of using the supplied BRBLU03-010A0.

PREPARATION

To prepare your setup, follow these steps:

1. Plug in the BT730 Carrier Board to the DVK motherboard.

NOTE: The carrier board plugs into 40-pin Hirose connector as shown in [Figure 1](#).

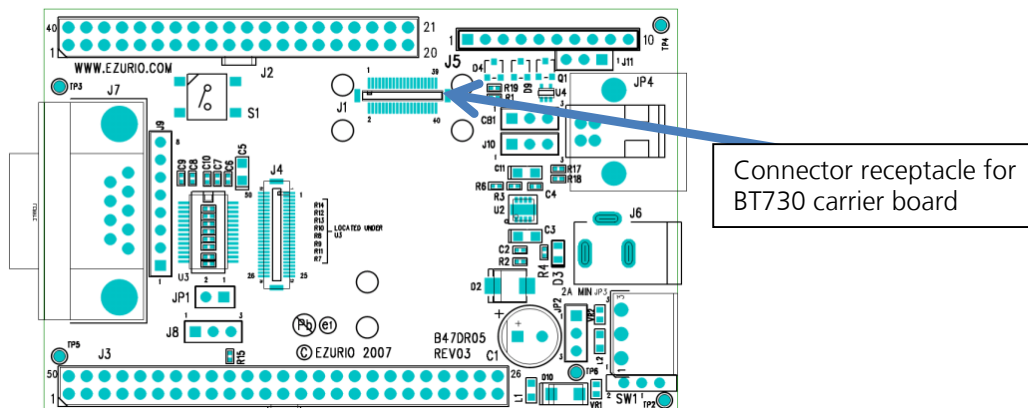


Figure 1: Carrier board connector

2. Connect RS232/USB-RS232 to the computer and development board.
3. Connect the USB cable to the computer and development board. TP2 is the power switch and there is an LED for power indication.
4. Install your preferred terminal program. We recommend using Laird / Ezurio Terminal.
5. Install MpBtHost, if utilising MP mode.
6. Open your terminal program and select the COM port that the RS232 / USB RS232 Adapter shows (9600 8N1)
7. Check communications by sending *AT* and then return. This should return *OK*.
8. Send the following commands to set up the module, as shown in Figure 2:

ATS538=1	Auto save link key if pairing is successful
ATS512=4	Put the module in discoverable and connectable mode
ATS0=1	Auto answer in 1 second
AT+BTK="1234"	Legacy pairing code
AT&W	Store new S Register settings
ATZ	Reboot the module, so settings become effective

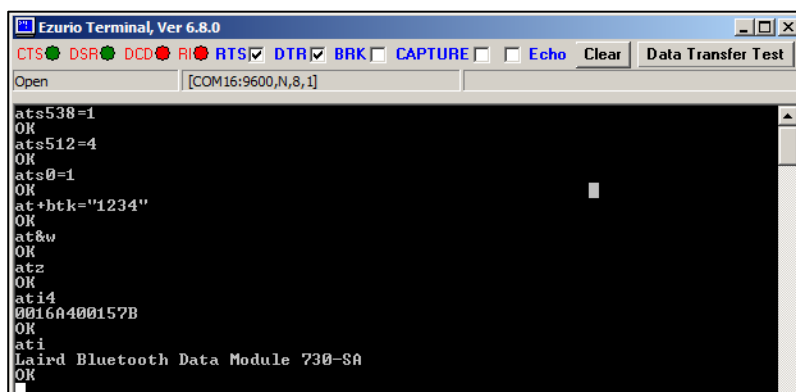


Figure 2: Module setup

EXCHANGE SERIAL DATA WITH A WINDOWS 7 COMPUTER EQUIPPED WITH A BRBLU03-010A0 USB BLUETOOTH DONGLE

The section details serial data exchange between the BT730 and a PC equipped with a BRBLU03-010A0 USB Bluetooth dongle. This communication is illustrated in Figure 3.



Figure 3: Serial data exchange

Hardware and Software Installation

To install the BLBLU03-0101A0 on your Windows PC, complete the following steps:

1. If your PC has a built-in Bluetooth module, disable it. To do so, locate it in the Windows Device Manager, right-click the device, and click **Disable**.
2. Plug the BRBLU03-010A0 into your computer. Windows 7 automatically detects the device and installs the required drivers. No driver downloads are required.
3. Once installed, check the Windows Device Manager (Figure 4). Note the presence of the Microsoft Bluetooth Enumerator and TDK Bluetooth USB Adaptor. These indicate a successful installation.

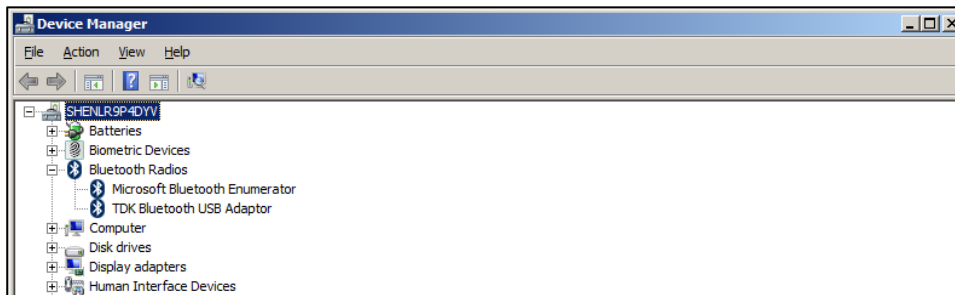


Figure 4: Windows Device Manager

Discovery and Pairing

The DVK-BT730 is now ready to be discovered by the PC. To initiate this process, follow these steps:

1. Click **Start > Devices and Printers**.
2. Click **Add a device**.
The DVK-BT730 appears (in this case as Laird 00157B) (Figure 5). If you cannot identify the correct device, refer to the AT14 command in Preparation.
3. Select the device and click **Next**.

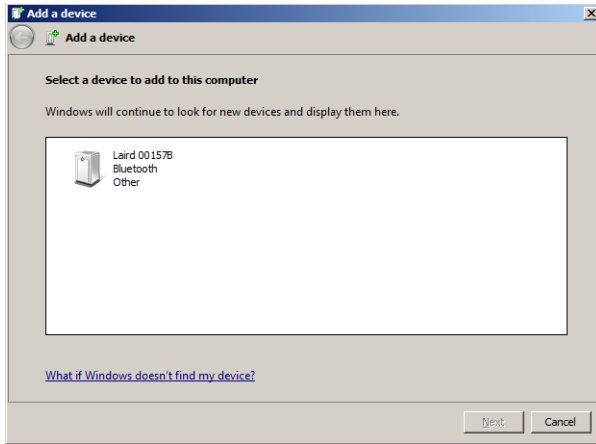


Figure 5: Add a Device window

4. Select **Enter the device's pairing code** (Figure 6). This was set to "1234" via AT+BTK="1234" in the Preparation.

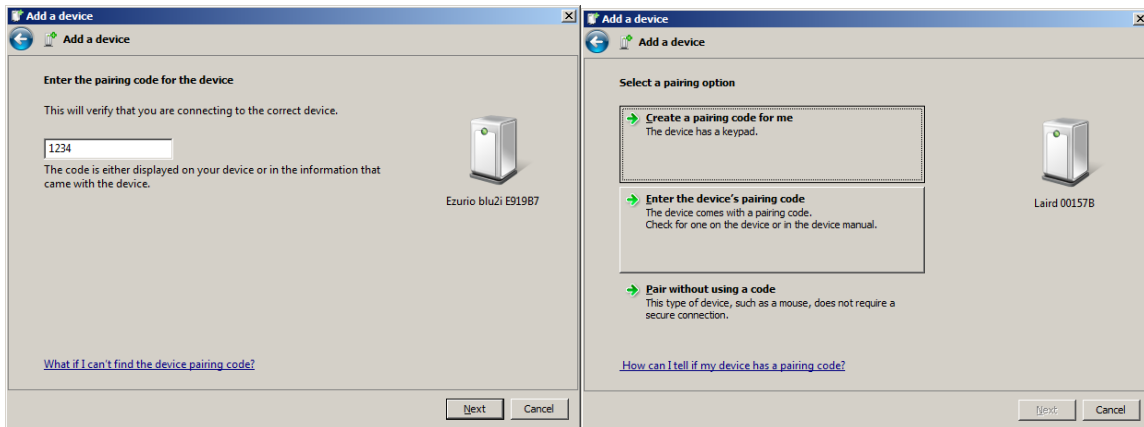


Figure 6: Enter the device's pairing code

A successful pairing is indicated by a "PAIR 0 <remote device address>" message in the terminal program connected to the module (Figure 7).

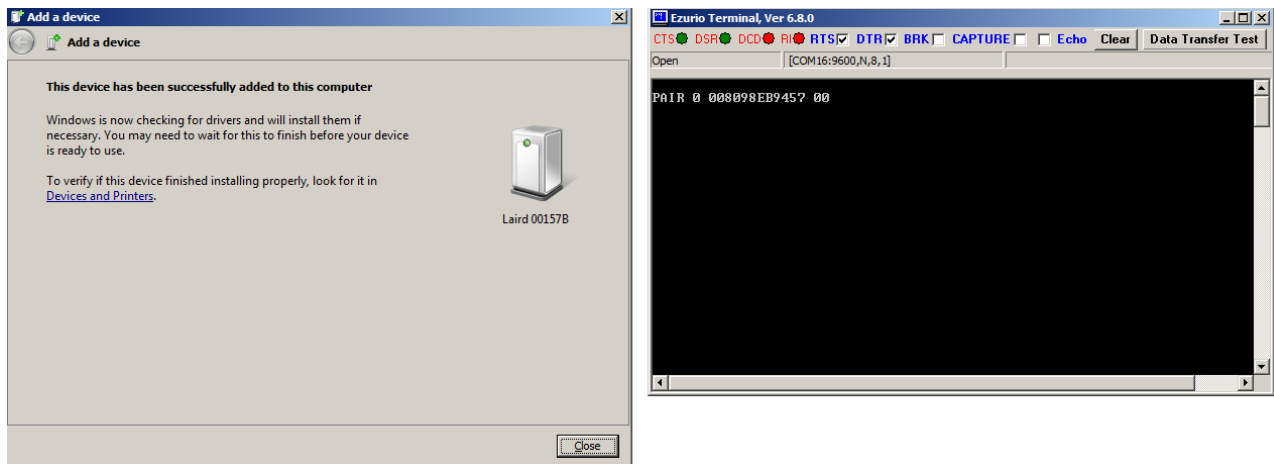


Figure 7: Device successfully added

Windows now displays the COM ports assigned for use with the DVK-BT730 (Figure 8).

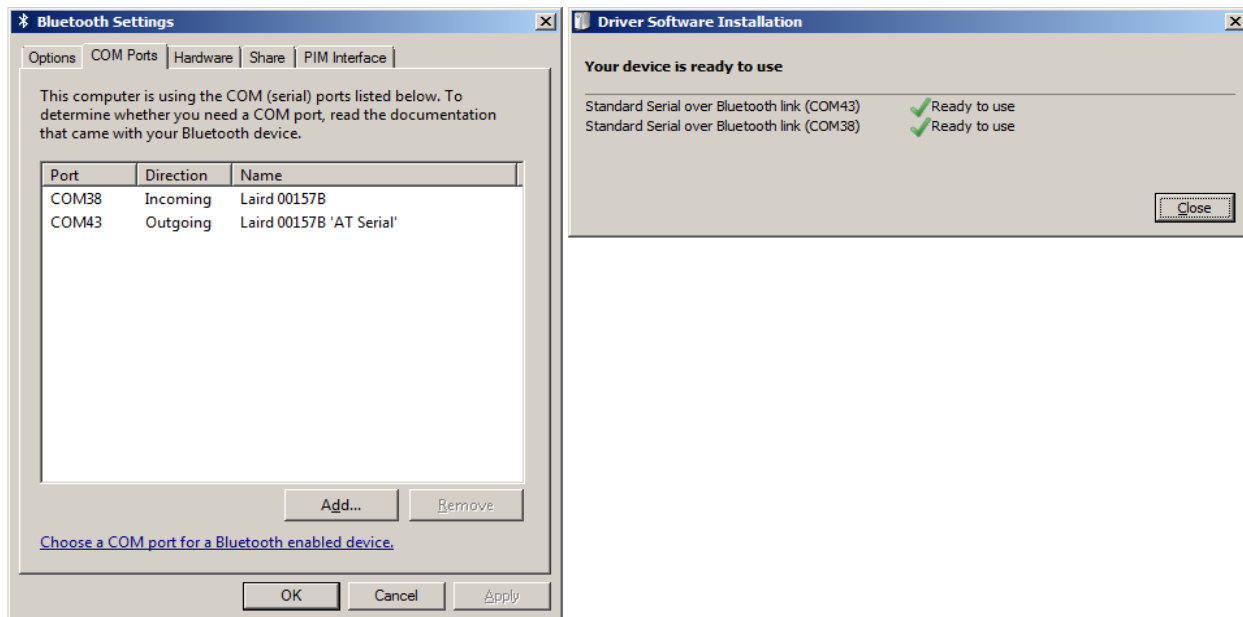


Figure 8: COM ports displayed

Connecting from PC to Module

To connect to the DVK-BT730 from the PC, open a second instance of Laird / EZURiO terminal using the outgoing computer COM port (COM43) noted in the previous step.

In the example below, the first Laird / EZURiO Terminal is connected to the module (COM16) and the second Laird / EZURiO Terminal is connected to virtual COM 43 on the PC. When the second Laird / EZURiO terminal (COM43) is opened, the connection is made and you should see a RING message followed by a CONNECT message from the module (Figure 9).

The 12 characters following the RING and CONNECT messages are the Bluetooth address of the remote device. The four characters following the BT address indicate the UUID, where 1101 is serial port profile.

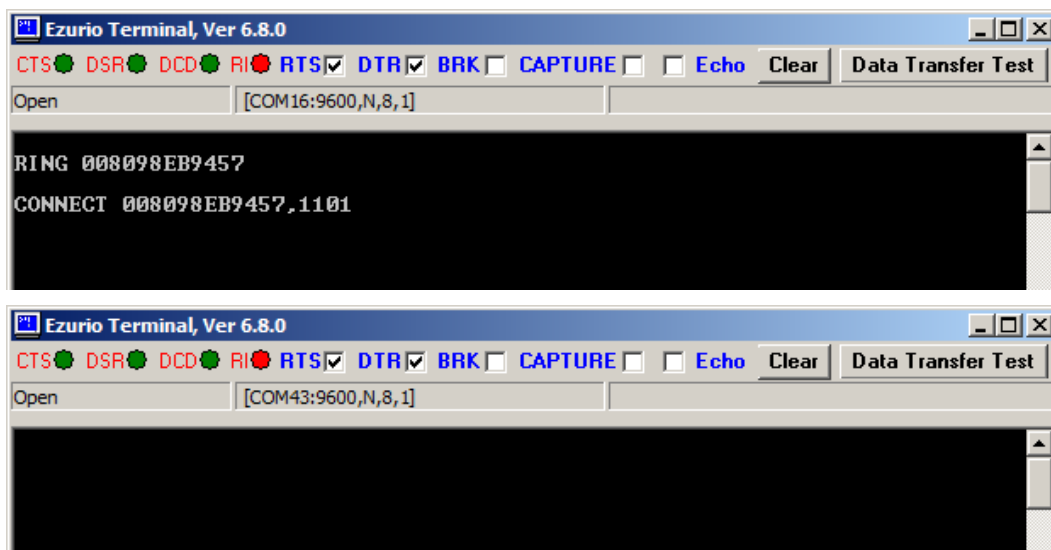


Figure 9: Connection made

A transparent data connection is now present. Any text entered into one Laird / EZURiO Terminal appears in the other terminal having been transmitted over the Bluetooth link between the DVK-BT730 modules and the PC. Note the status of the DCD during a connection (Figure 10).

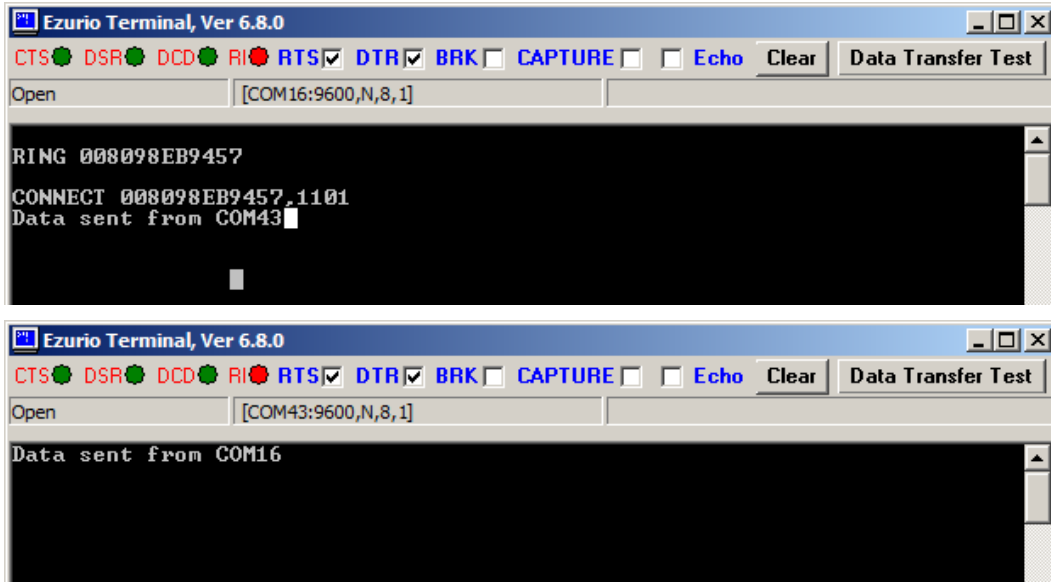


Figure 10: Transparent data connection present

The connection can be dropped by typing ^^^ into the module terminal window on COM16. This appears in the computer terminal window but is interpreted as a command to enter local command mode. Once in local command mode, OK displays and you may issue ATH to drop the connection; at this point, NO CARRIER displays (Figure 11).

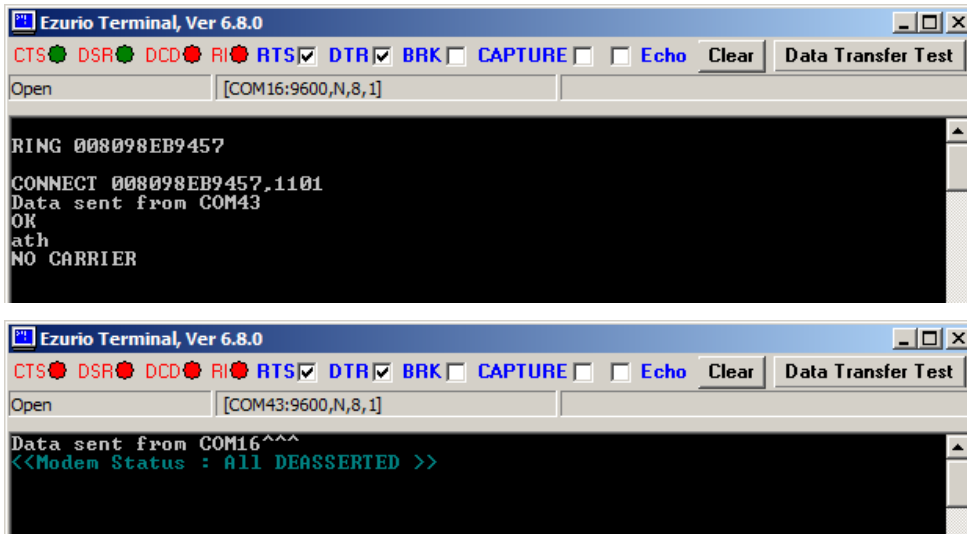


Figure 11: Connection dropped

EXCHANGE SERIAL DATA WITH A WINDOWS 7 COMPUTER (EQUIPPED WITH A BUILT IN BLUETOOTH MODULE)



Figure 12: Serial data exchange with Windows 7 computer

The customer can confirm if the computer is equipped with a built-in Bluetooth module by checking Windows Device Manager (Figure 13).

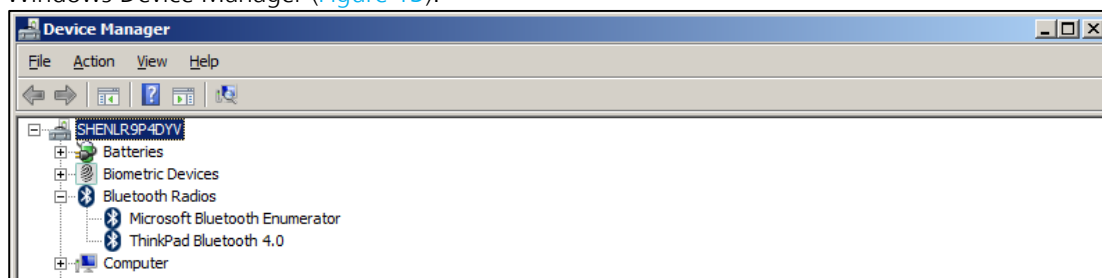


Figure 13: Windows Device Manager

Discovery and Pairing

The DVK-BT730 is now ready to be discovered by the computer.

To discover and pair the DVK-BT730, follow these steps:

1. Open **Device and Printers**.
2. Click **Add a device**. The DVK-BT730 should now appear, in this case as Laird 00157B (Figure 14). If you cannot identify the correct device, refer to the AT14 command from the module setup (Figure 2).

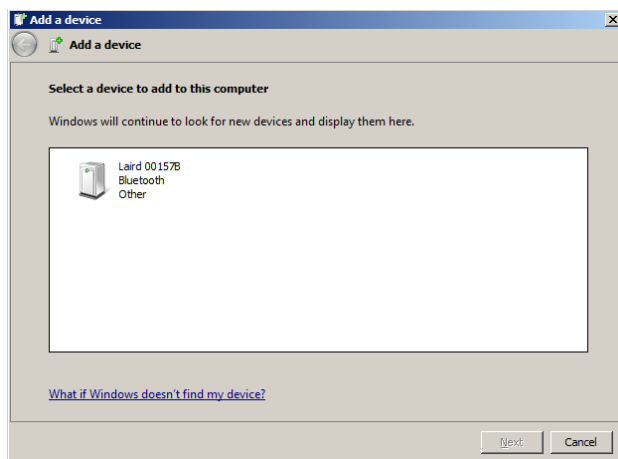


Figure 14: Add a device

3. Select the device and click **Next**.
4. Select Enter the device's pairing code (Figure 15). This code was set to "1234" using the command AT+BTK="1234" in Preparation.

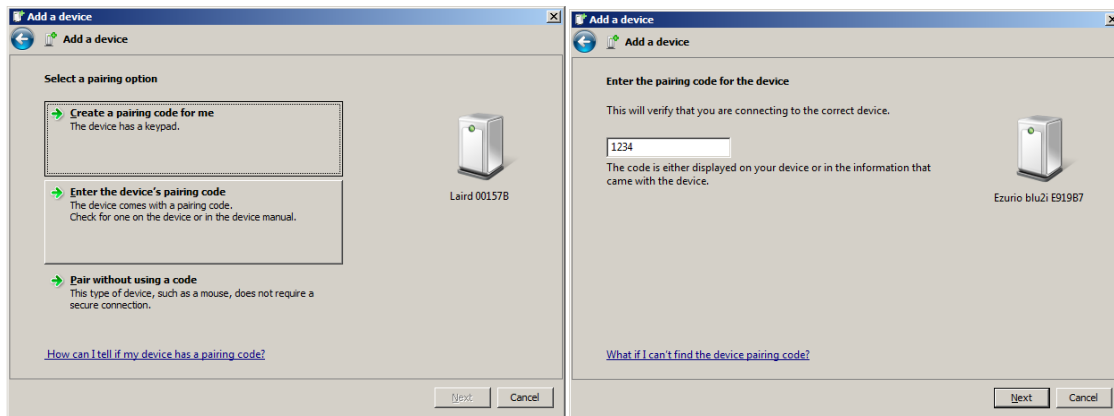


Figure 15: Select Enter the device's pairing code

A successful pairing is indicated by a "PAIR 0 <remote device address>" message in the terminal program connected to the module (Figure 16).

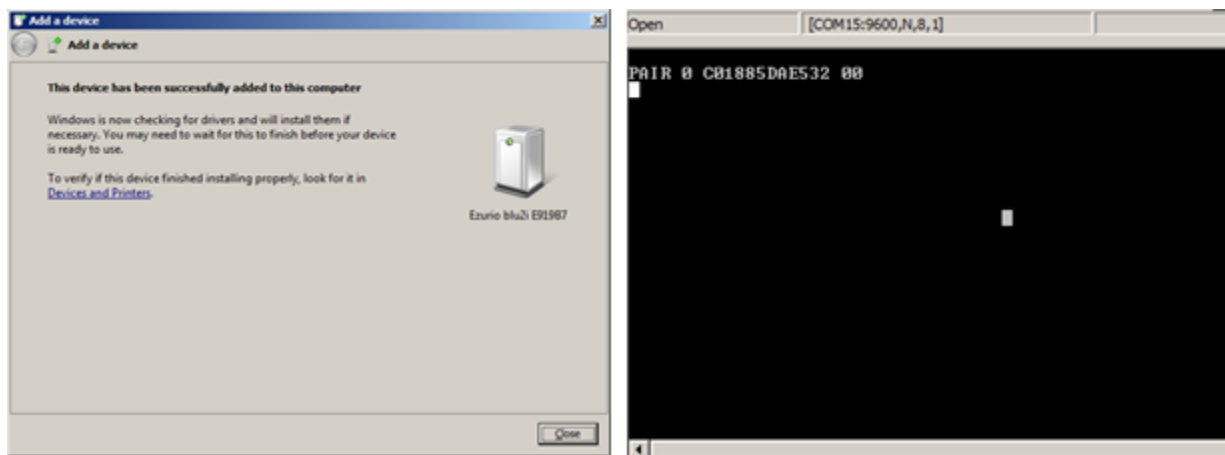


Figure 16: Successful pairing indicated

Windows displays the COM ports assigned for use with the DVK-BT730 (Figure 17).

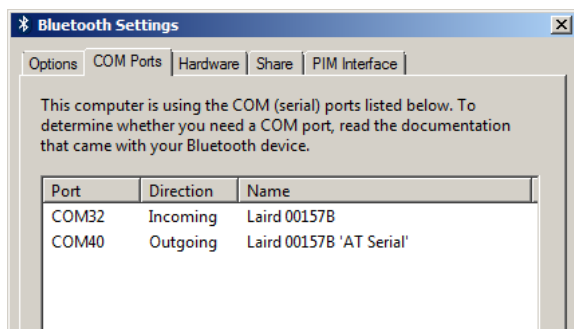


Figure 17: COM ports displayed

Connecting from Module to PC

To connect from the DVK-BT730 to the PC, open a second instance of Laird / EZURiO terminal using the incoming computer COM port (COM32) noted in the previous step. In the example below, the first Laird / EZURiO Terminal is connected to COM40 as an incoming port on PC and the second Laird / EZURiO Terminal is connected to the module on COM 16.

The virtual incoming COM port (COM32) is waiting for an incoming connection, as the DCD indication is deserted (Figure 18).

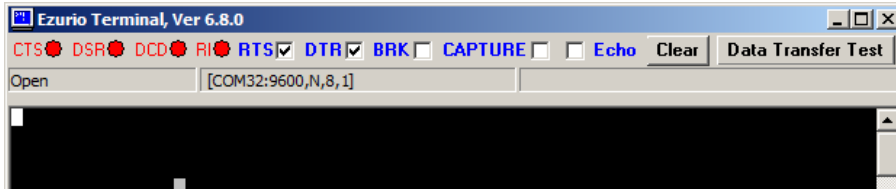


Figure 18: Virtual incoming COM32 port

When ATD<Computer BT MAC address> is issued to the module, a SPP connection is initiated (Figure 19). Error! Reference source not found..

The 12 characters following the CONNECT message are the Bluetooth address of the PC BT module. The four characters following the BT address indicate the UUID, where 1101 is Serial Port Profile.

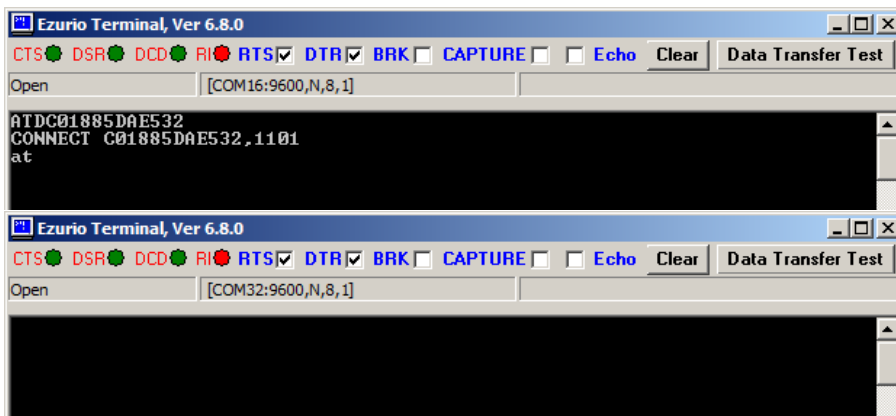
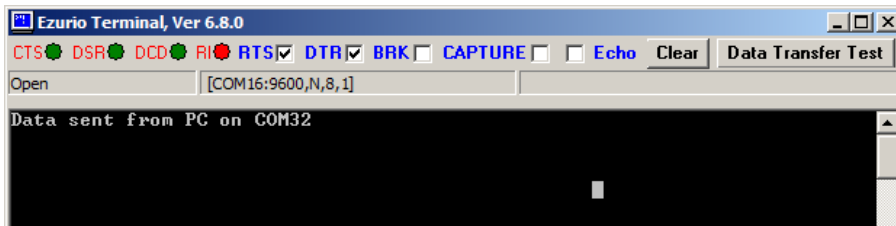


Figure 19: SPP connection initiated

A transparent data connection is now present. Any text entered into one Laird / EZURiO Terminal appears in the other having been transmitted over the Bluetooth link between the DVK-BT730 modules and the PC. Note the status of the DCD during a connection (Figure 20).



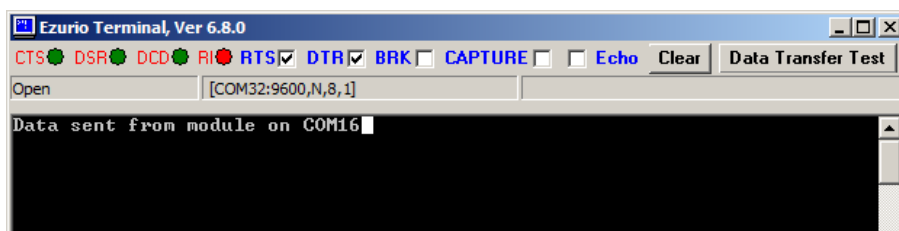


Figure 20: Transparent data connection

The connection can be dropped by typing ^^^ into the module terminal window. This appears in the computer terminal window but is interpreted as a command to enter local command mode. Once in local command mode, OK displays and you may issue ATH to drop the connection; at this point, NO CARRIER displays (Figure 21).

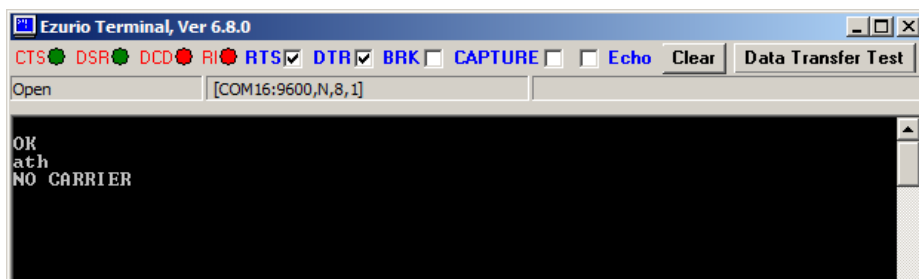


Figure 21: Connection dropped

EXCHANGE SERIAL DATA WITH AN ANDROID PHONE

To create an SPP connection to the module, we use the [BlueTerm application](#) available from the Play Store.



Discovery and Pairing

The DVK-BT730 is now ready to be discovered by the Android phone. To do this, follow these steps:

1. From the BlueTerm application, click **Menu** and select **Connect device**.
2. Click **Scan for devices**. The BTM731 should appear in the list.
3. Select the applicable device and enter **1234** as the pairing code.

These steps are illustrated in [Figure 22](#).

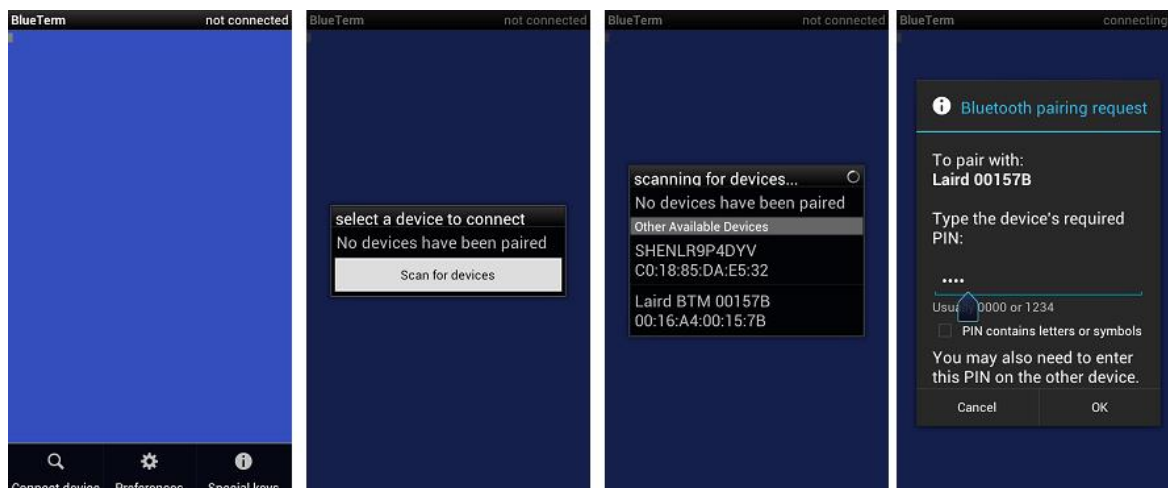


Figure 22: Discovery using an Android phone

Connecting

Once pairing is successful, a SPP connection is initiated automatically from phone to module (Figure 23).

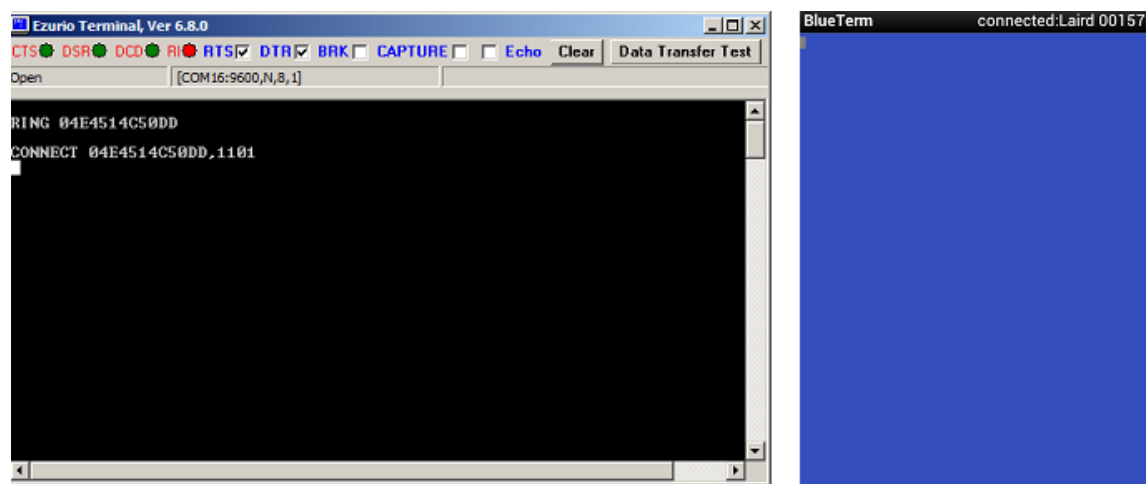


Figure 23: SPP connection initiated automatically

A transparent data connection is now present. Any text entered into Laird / EZURiO Terminal appears on BlueTerm. Note the status of the DCD during a connection.

The connection can be dropped by typing **^^^** into the module terminal window (left). This appears in the computer terminal window but is interpreted as a command to enter local command mode. Once in local command mode, OK displays and you may issue **ATH** to drop the connection; at this point, **NO CARRIER** displays (Figure 24).

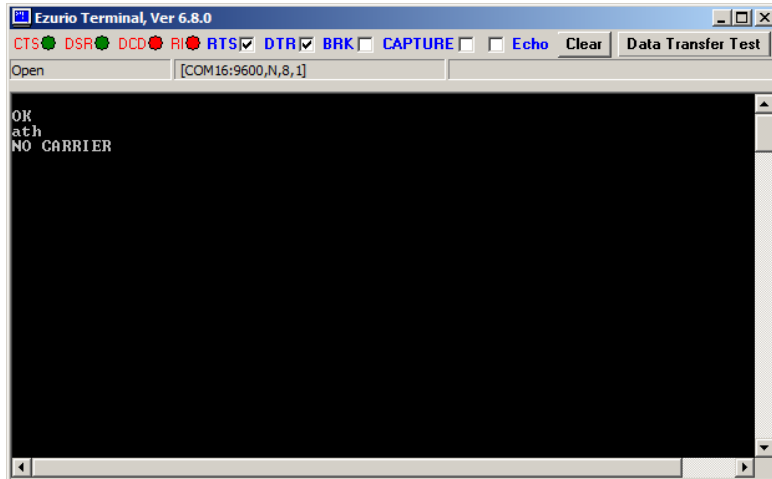


Figure 24: Connection dropped

EXCHANGE SERIAL DATA WITH ANOTHER DVK-BT730 BOARD

A pair of DVK-BT730s is required in this example. The first board is configured as in the previous section. On the second board, no specific configuration is required.

Discovery and Pairing

The first DVK-BT730 with MAC address (0016A4400157B) (on COM16) is ready to be discovered by the second DVK-BT730 with MAC address 0016A440004A which is physically connected to COM1.

On the second development board, issue AT+BTIN to discover the first board (Figure 25).

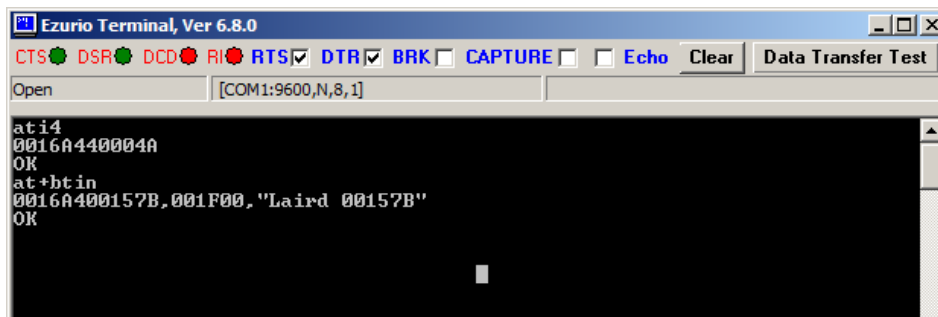


Figure 25: Issue AT+BTIN

Once the first board is discovered, issue AT+BTW<MAC address> and AT+BTK="1234" to complete the pairing process. Since Auto Save link is not enabled, AT+BTT is issued to save the link manually (Figure 26).

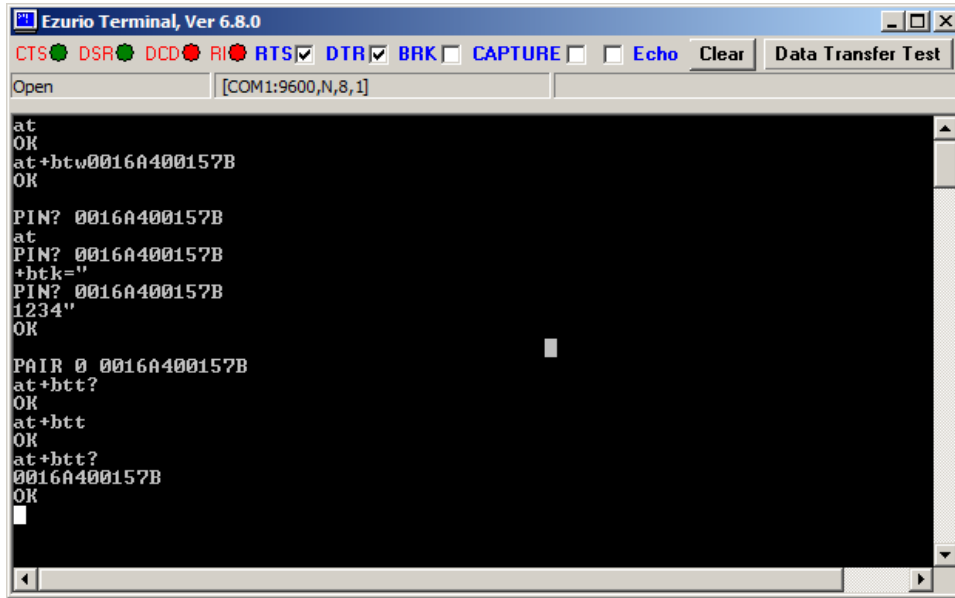


Figure 26: Complete pairing process

Connecting

On the second board, issue ATD<MAC address> to initiate a SPP connection (Figure 27).

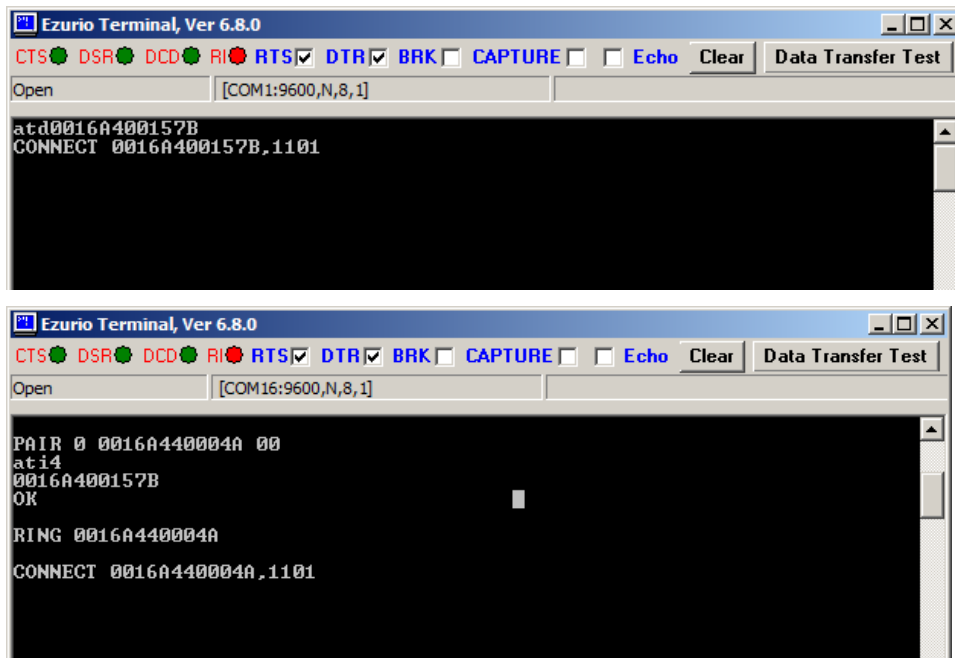


Figure 27: Initiate a SPP connection

A transparent data connection is now present between the two development boards. Any text entered into one terminal appears on the other.

Drop the connection by typing ^^^ into the module terminal window (left). This appears in the computer terminal window but is interpreted as a command to enter local command mode. Once in local command mode, OK displays and you may issue ATH to drop the connection; NO CARRIER displays (Figure 28).

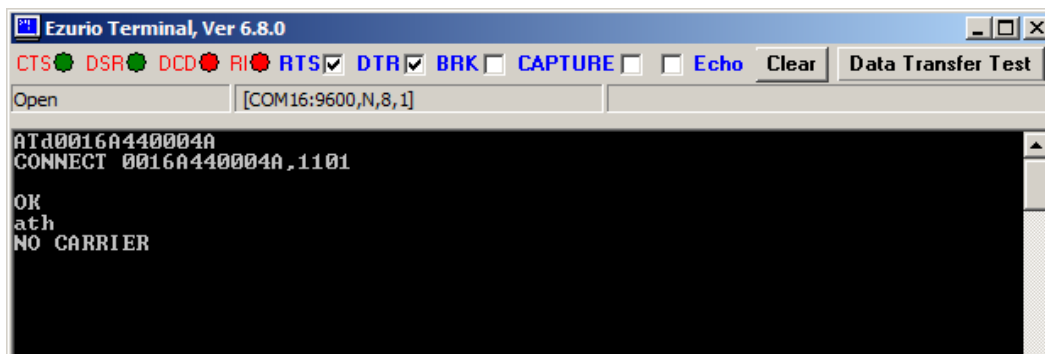


Figure 28: Connection dropped

AUTOMATIC CONNECT

Issue AT+BTR<MAC address> on the second board on COM 1 to initiate an SPP connection automatically. It can attempt to reconnect if the connection is disconnected.

Configuration on the second board (COM 1)

ATS538=1	Auto save link key if pairing is successful
ATS500=1	Default authentication for outgoing connections
ATS512=1	Idle Mode
ATS507=1	Allows DSR input to be used to inhibit autoconnect cycle
ATS505=10	Connection attempts timeout after ten seconds
ATS530=15000	Wait period in milliseconds between connection attempts
AT+BTK="1234"	Legacy pairing code
AT&W	Store S register settings
ATZ	Reboot module

Discovery and Pairing

The first DVK-BT730 (with MAC address 0016A400157B) on COM16 is now ready to be discovered by the second DVK-BT730 (with MAC address 0016A440004A), which is physically connected to COM1.


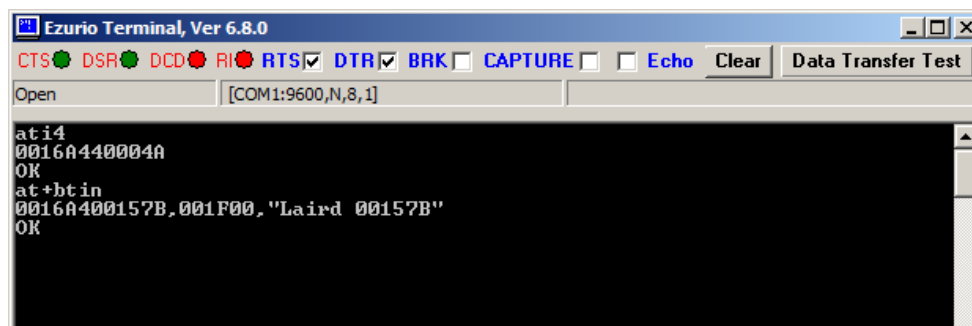


Figure 29: COM1

Once the first board is discovered, issue AT+BTW<MAC address> on the second board to complete the pairing process (Figure 30).

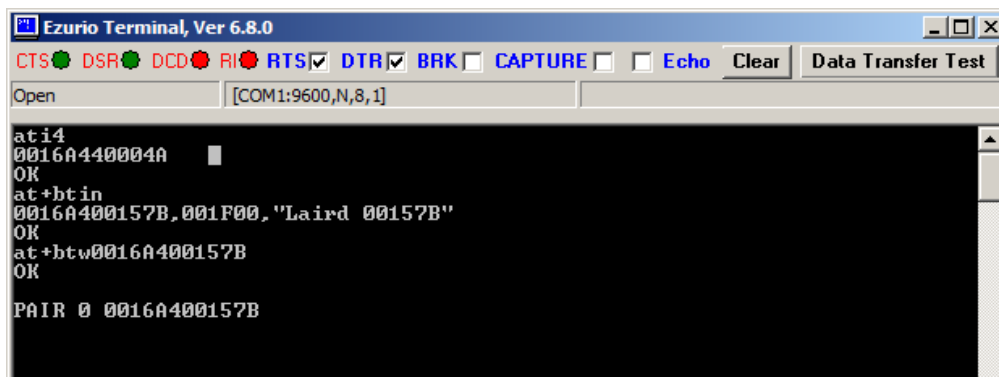

```


Ezurio Terminal, Ver 6.8.0
CTS DSR DCD RI RTS DTR BRK CAPTURE Echo Clear Data Transfer Test
Open [COM1:9600,N,8,1]

at+btin
0016A400157B,001F00,"Laird 00157B"
OK
at+btw0016A400157B
OK
PAIR 0 0016A400157B
  
```

Figure 30: Complete the pairing process

Connecting

Set the peer address and reboot the module. The second board automatically initiates the SPP connection to the first board (Figure 31).

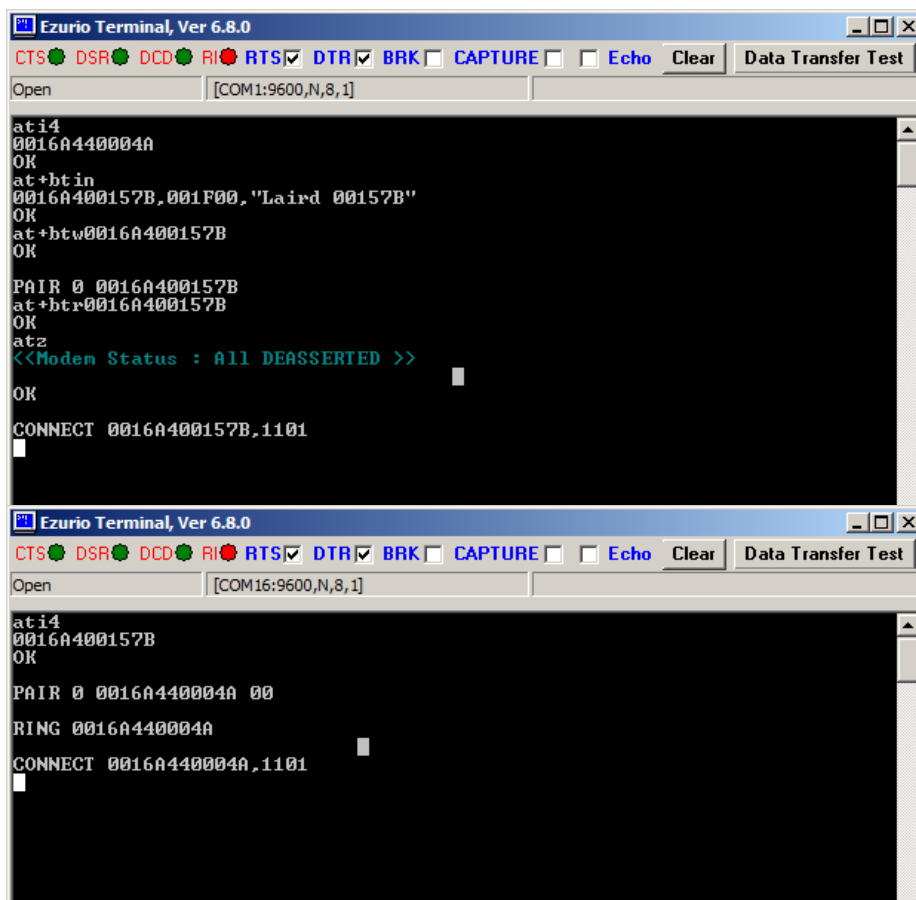

```

Ezurio Terminal, Ver 6.8.0
CTS DSR DCD RI RTS DTR BRK CAPTURE Echo Clear Data Transfer Test
Open [COM1:9600,N,8,1]

at+btin
0016A400157B,001F00,"Laird 00157B"
OK
at+btw0016A400157B
OK
PAIR 0 0016A400157B
at+btr0016A400157B
OK
atz
<<Modem Status : All DEASSERTED >>
OK
CONNECT 0016A400157B,1101
  
```

```

Ezurio Terminal, Ver 6.8.0
CTS DSR DCD RI RTS DTR BRK CAPTURE Echo Clear Data Transfer Test
Open [COM16:9600,N,8,1]

at+btin
0016A400157B
OK
PAIR 0 0016A440004A 00
RING 0016A440004A
CONNECT 0016A440004A,1101
  
```

Figure 31: Connection completed

ADDITIONAL DOCUMENTATION AND RESOURCES

Laird offers a variety of documentation and ancillary information to support our customers through the initial evaluation process and ultimately into mass production. Further documentation is available from the documentation tab of the [BT730 product page](#). It includes:

Embedded Wireless Solutions Support Center:
<http://ews-support.lairdtech.com>
www.lairdtech.com/bluetooth

- BT730 – Firmware User manual
- BT730 – Hardware Integration Guide (HIG)
- DVK-BT730 – User Manual
- DVK-BT730 – Schematics

Software Links

- FTDI Driver: <http://www.ftdichip.com/Drivers/VCP.htm>
- Laird / EZURiO terminal: (found in software tab of [BT730 product page](#))
- Windows 7 Bluetooth: <http://windows.microsoft.com/en-us/windows7/add-a-bluetooth-enabled-device-to-your-computer>

For any additional questions or queries, or to receive local technical support for this Development Kit or for the BT730 module series, please contact wirelessinfo@lairdtech.com.

REVISION HISTORY

Revision	Date	Description	Approved By
1.0	9 July 2013	Initial Release	Jonathan Kaye
1.1	16 Oct 2013	Minor Edits	Jonathan Kaye